


*Required Maintenance*

**Keep your iGe sounding its best, protect your investment, and guard against possible ear infection.**

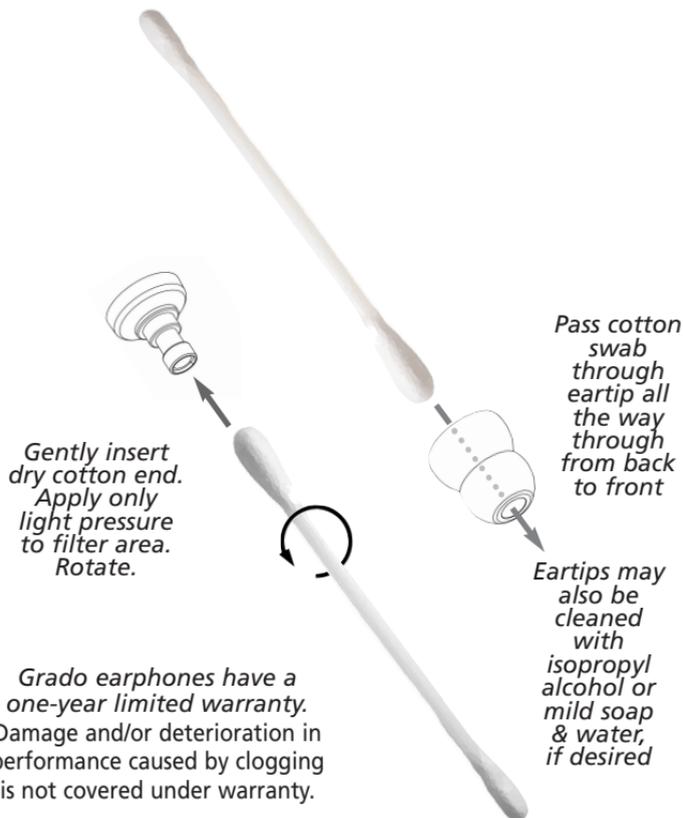

*Grado earphones have a one-year limited warranty. Damage and/or deterioration in performance caused by clogging is not covered under warranty.*

# GRADO

## iGe

*Celebrating  
Over 50 Years  
of Tradition...*

Grado is one of the oldest family-owned companies in the audio industry. For more than half a century, we've been leaders in innovative design for musical playback. This legacy continues with earphones that retain the legendary Grado headphone sound, yet are compact and nestle within the ear. So sit back and enjoy warm harmonic color, clear full-bodied vocals, and an ultra-smooth top end!

**Grado Labs, Brooklyn NY USA**  
**Home of the World's Finest Headphones**

Frequency Response: 20-20,000 Hz  
Rated Impedance: 24 Ohms  
Sensitivity (1kHz): 105dB at 1mW  
Maximum Input power: 30mW  
Connector: 3.5mm RTTS mini-plug

*Grado earphones have a one-year limited warranty.*

To learn more and to register your earphones, please visit our website: [www.gradolabs.com](http://www.gradolabs.com)



Made in China

**Caution:** Listening at high volume may damage your hearing.

## The Microphone-Controller

The mic-controller is attached to the right earpiece. The mic should be facing you, both for best sound quality and for ease of button use.



Volume UP

Center Button

Volume DOWN

Mic



A single press of the Center Button will Play or Pause a song or video, or will Answer or End a call. The button can also provide other control functions.

**Important: Not all control features are supported by all models. For more information, please refer to your iPhone, iPad, or iPod user guide or [Apple.com](http://Apple.com).**

*Note: Some Android devices may accept basic commands.*

## How to use the Center Button (CONTROL)

### Music Tracks & Videos

To Play or Pause, press the Center Button (CONTROL) once; press again to resume.

To Skip to the next song or chapter, press CONTROL twice quickly.

To Skip Back to the previous song or chapter, press CONTROL 3 times quickly.

To Fast-Forward, press CONTROL twice quickly and hold.

To Rewind, press CONTROL 3 times quickly and hold.

### Phone Calls

To Decline an incoming call, hold down CONTROL for about 2 seconds, then release. When you let go, 2 low beeps confirm that you have declined the call.

To Switch to an incoming or on-hold call and put the current call on hold, press CONTROL once. Press again to switch back to the first call.

To Switch to an incoming or on-hold call and end the current call, hold down CONTROL for about two seconds, then release. When you let go, 2 low beeps confirm that you ended the first call.

### Siri

To initiate or continue a conversation with Siri, press and hold CONTROL each time you want to talk. To learn more about using Siri, please see the user guide for your device.

*Apple, iPhone, iPad, iPod, and Siri are trademarks of Apple Inc.*